


Engine oil quality is the chief factor affecting engine service life. Change the engine oil as specified in the maintenance schedule (page 42).

**NOTE:**

- \* Change the engine oil with the engine at normal operating temperature and the motorcycle on its side stand to assure complete and rapid draining.

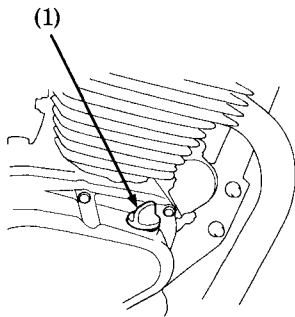


(1) Oil filler cap

1. To drain the oil, remove the oil filler cap (1), crankcase drain plug (2) and sealing washer (3).
2. Check that the sealing washer on the drain plug is in good condition and install the plug.

Oil Drain Plug Torque:

25 N·m (2.5 kg-m, 18 lb-ft)

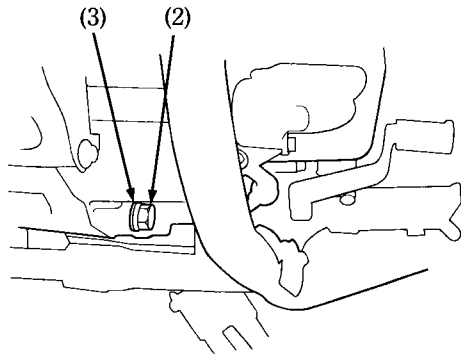

(2) Oil drain plug

(3) Sealing washer