 




To set the clock:

- 1 Turn the ignition switch ON.
- 2 Press and hold **A** and **B** buttons until the hour digits start flashing.



- 3 Press **A** button until the desired hour and AM/PM are displayed.
 - ▶ Press and hold to advance the hour fast.
- 4 Press **B** button until the desired minute is displayed.
 - ▶ Press and hold to advance the minute fast.

- 5 Turn the ignition switch OFF.
 - ▶ The adjustment will be cancelled if no operation is performed for 30 seconds during the time adjustment mode.

