


Removing & Installing Body Components

Seat

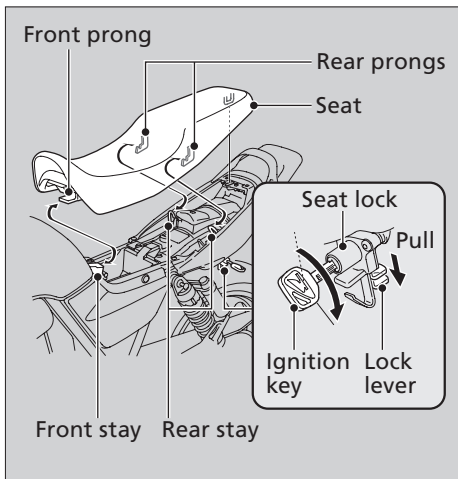

Removal

1. Insert the ignition key into the seat lock and turn it clockwise.
2. Pull the seat lock lever downward to unlock the seat.
3. Pull the seat back and up.

Installation

1. Insert the front prong into the front stay and the rear prongs into the rear stays on the frame.
2. Push forward and then down on the rear of the seat.
 - ▶ Make sure that the seat is locked securely in position to pull it up lightly.
 - ▶ The seat locks automatically when closed. Take care not to lock your key under the seat.