

Drive Chain ► Adjusting the Drive Chain Slack

5. Inspect the sprockets. ➤P.39
6. Clean and lubricate the drive chain.
➤P.40


Adjusting the Drive Chain Slack

Adjusting the chain requires special tools. Have the drive chain slack adjusted by your dealer.

(CB400A only)

When adjusting the drive chain slack, be careful not to damage the wheel speed sensor and pulser ring.

1. Place your motorcycle on the side stand on a level surface.
2. Stop the engine. Place the transmission in Neutral.
3. Loosen the rear axle nut.

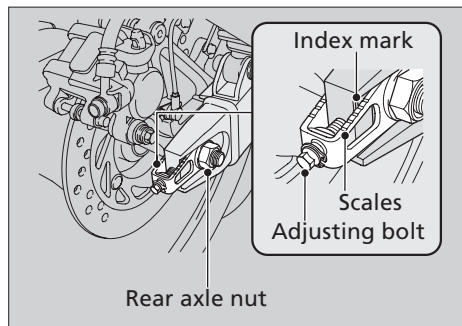

4. Turn both adjusting bolts an equal number of turns until the correct drive chain slack is obtained. Turn the adjusting bolts counterclockwise to tighten the chain. Turn the adjusting bolts clockwise to provide more slack. Adjust the slack at a point midway between the front sprocket and the rear wheel sprocket. Check the drive chain slack. ➤P.59