


Removing & Installing Body Components ► Front Seat

Front Seat

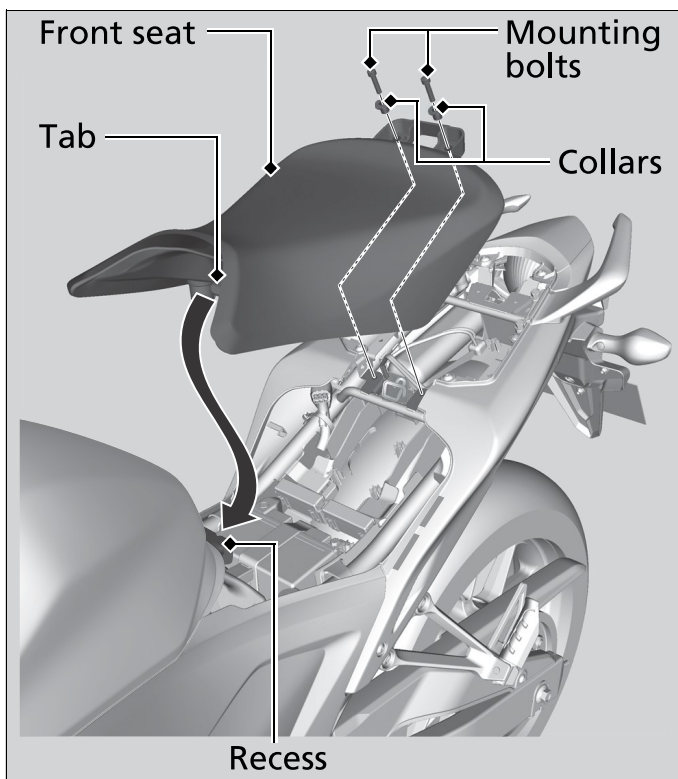

Removal

1. Remove the rear seat. ► P. 58
2. Remove the mounting bolts and collars, and then pull the front seat back and up.

Installation

1. Insert the tab into the recess.
2. Install the collars and mounting bolts.
3. Tighten the mounting bolts securely. Make sure that the seat is locked securely in position to pull it up lightly.

Maintenance