


ELECTRICAL CONTROLS

MAIN SWITCH

The main switch ① is located on the left side under the forward end of the fuel tank. Functions of the respective switch positions are shown in the chart below.

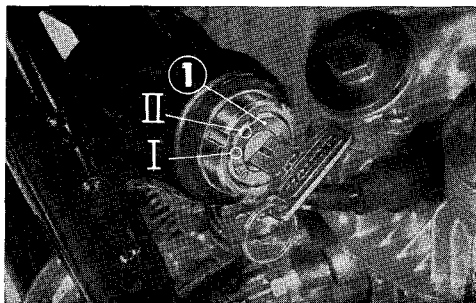

① Main switch

Key position	Function	Key Removal
OFF	Electric circuit is open, engine will not start and no lights will operate.	Key can be removed.
I (ON)	Electric circuit is completed, lights will operate and engine can be started.	Key can not be removed.
II (Parking)	Electric circuit is open, however, the tail light will be lighted. The key should be removed when parking the motorcycle.	Key can be removed.