


REPLACING LIGHT BULBS

When exchanging the light bulbs, always replace the bulb with that of the specified type and rating. This is important to prevent the electrical lighting circuit from malfunctioning. The light bulbs are listed below.

Headlight bulb; 12V-50/40W

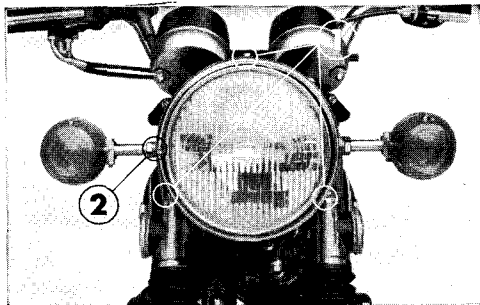


- ① Horizontal adjusting screw
- ② Mounting screws

Tail/stop light bulb; 12V-7/23W
Turn signal light bulb; 12V-25W

1. Headlight Bulb Replacement Procedure

- a. Remove horizontal adjusting screw ① and mounting screws ②.

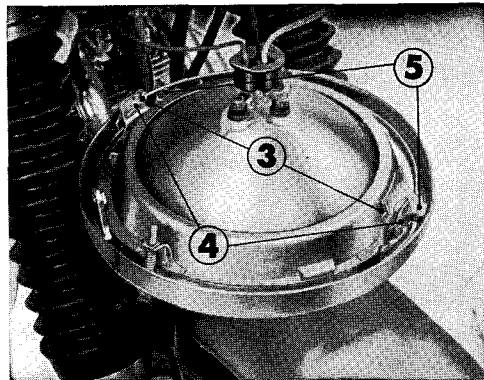

- ③ Lock pins
- ④ Lock screws
- ⑤ Sealed beam unit retaining screws