



← Left turn signal indicator

N Neutral indicator

Comes on when the transmission is in Neutral.

HISS indicator → P.83 → P.104

- Comes on briefly when the ignition switch is turned on. Goes off if the ignition key has the correct coding.
- Flashes every 2 seconds for 24 hours when the ignition switch is turned off.

⇒ Right turn signal indicator

☰ High beam indicator