


### Position Light Bulb (Except U ) (CB600F)

1. Remove the headlight (page 95).
2. Pull out the socket (1).
3. Slightly press the position light bulb (2) and turn it counterclockwise.
4. Install a new bulb in the reverse order of removal.

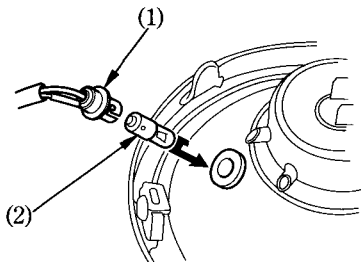

- (1) Socket  
(2) Position light bulb