


CB600F II (U)

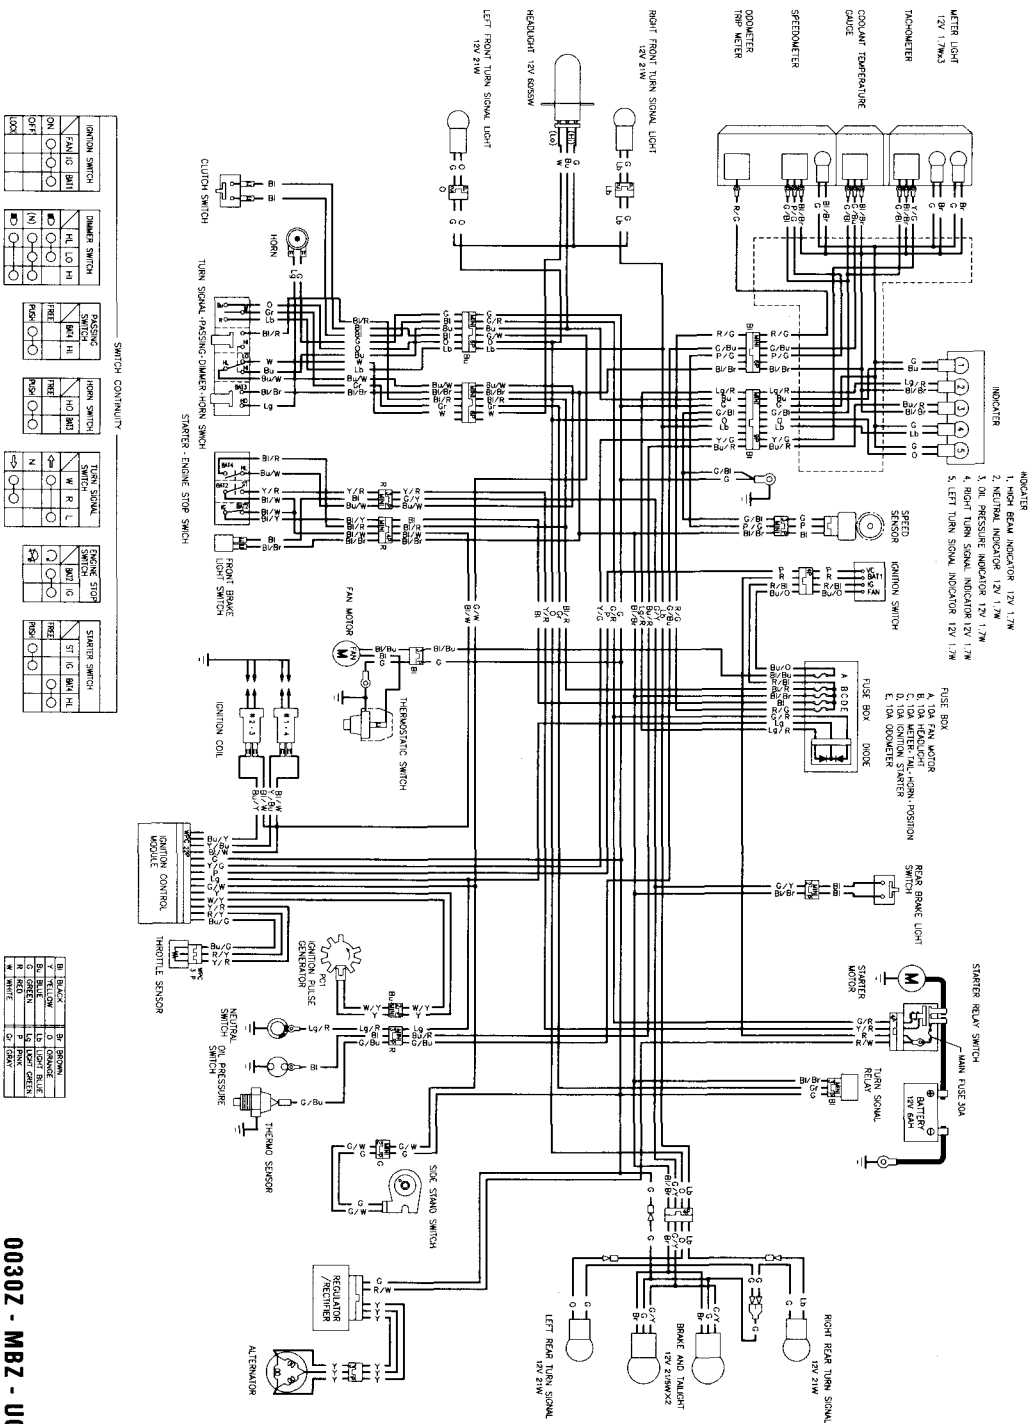

- INDICATOR
1. FRONT BEAM INDICATOR 12V 1.7W
 2. HEADLIGHT 12V 21W
 3. TAIL LIGHT 12V 21W
 4. RIGHT TURN SIGNAL INDICATOR 12V 1.7W
 5. LEFT TURN SIGNAL INDICATOR 12V 1.7W

- FUSE BOX MAIN FUSES
- A. 10A HEADLIGHT
 - B. 10A WATER, FUEL, POSITION
 - C. 10A WATER, FUEL, POSITION
 - D. 10A ODOMETER
 - E. 10A ODOMETER

SWITCH CONTINUITY

IGNITION SWITCH	IGNITION SWITCH	PASSING SWITCH	HORN SWITCH	TURN SIGNAL SWITCH	STARTER STOP SWITCH
ON OFF LOCK	HL LO HI	PAUSE	HL HI	ST L R L	ST L HI HI
ON OFF LOCK	ON OFF LOCK	PAUSE	ON OFF LOCK	ON OFF LOCK	ON OFF LOCK

B. BLACK	B. BROWN
R. RED	L. LIGHT GREEN
G. GREEN	Y. LIGHT GREEN
W. WHITE	G. GRAY

0030Z - MBZ - U000