

## 7 Changing of fuel mileage meter unit:

- 1 Press the **SEL** button to select "L/100 km" or "km/L".



If the "mph" for speed and "mile" for mileage are selected, the fuel mileage shown by "mile/L" or "mile/gal".



- 2 To end the selection, press the **SET** button. The fuel consumption meter unit is set, and then the display returns to ordinary display.

The established setting can also be set by turning the ignition switch to OFF.

The control is automatically switched from the setting mode to the ordinary display if the button is not pressed for about 30 seconds. Even in this case, established setting is maintained.