

Troubleshooting

Engine Will Not Start (HISS indicator stays on)	P. 83
Overheating (High coolant temperature indicator is on).....	P. 84
Warning Indicators On or Flashing	P. 85
Low Oil Pressure Indicator.....	P. 85
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL)	P. 85
ABS (Anti-lock Brake System) Indicator	P. 86
Other Warning Indications	P. 87
Fuel Gauge Failure Indications.....	P. 87
Tyre Puncture	P. 88
Electrical Trouble	P. 96
Battery Goes Dead	P. 96
Burned-out Light Bulb.....	P. 96
Blown Fuse	P. 100