


AIR CLEANER

(Refer to the maintenance precautions on page 50).


The air cleaner should be serviced at regular intervals (page 45). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the left side cover.
2. Remove the attaching screws(1) and air cleaner cover(2).

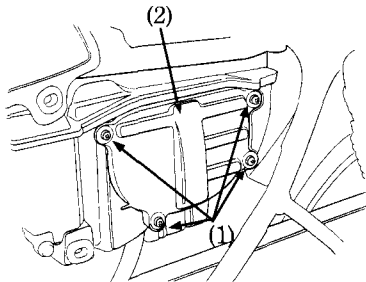

(1) Attaching screws (2) Air cleaner cover

3. Pull the set spring (3) out.
4. Remove and discard the air cleaner element (4).
5. Install a new air cleaner element.
Use the Honda air filter or an equivalent filter specified for your model. Other filters not specified for your model may not filter impurities properly.
6. Install the removed parts in reverse order of removal.

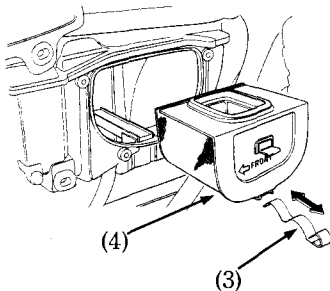

(3) Set spring (4) Air cleaner element