


Installation Notes:

Position the front wheel between the fork legs and insert the axle from the left side, through the left fork leg and wheel hub.

**CAUTION:**

**\* When installing the wheel, carefully fit the left brake disc between the brake pads to avoid damaging the pads.**

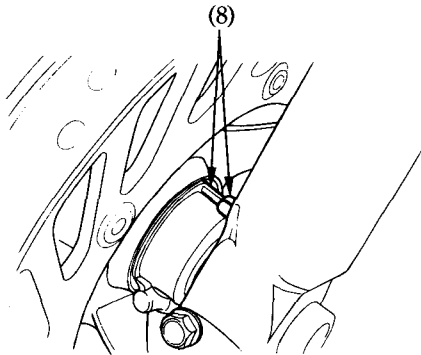

Position the lug on the speedometer gear box against the lug (8) on the left fork leg. Tighten the axle bolt to the specified torque.

Front axle torque :

59 N·m (6.0 kgf·m , 43 lbf·ft)

Fit the caliper over the disc, taking care not to damage the brake pads. Install the caliper fixing bolts, and tighten to a torque of :

30 N·m (3.1 kgf·m , 22 lbf·ft)

(8) Lugs