



by measuring the clearance between the face of the caliper inner housing and the brake disc by pressing the inner housing toward the disc. If clearance is less than **0.12 in. (3.0 mm)**, replace with new pads as a set.

**NOTE:** Use only **HONDA** genuine replacement friction pads offered by authorized **HONDA** dealers. When service is necessary on the brakes, consult your **HONDA** dealer.

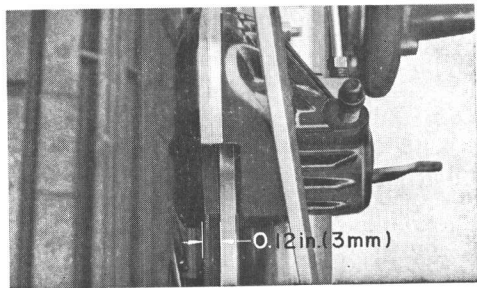

## 6. Rear Brake Adjustment

The rear brake is of an internally expanding type. To check the rear brake pedal ① for free travel, raise the rear wheel off the ground by supporting the motorcycle with the main stand. Then hand-rotate the wheel, measuring the distance the pedal can move before the brake is applied. Normal free travel is approx. **1 in. (25 mm)** as measured at the tip of the pedal. If readjustment is necessary, turn the adjust-

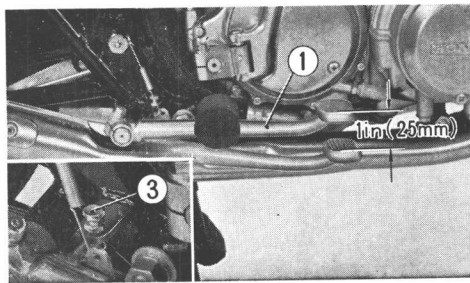

① Rear brake pedal

③ Stop bolt