


## 2. Tail/Stoplight Bulb Replacement Procedure

- a. Remove the two screws retaining the tail/stop light lens.
- b. Press the bulb ① inward and twist to the left, and the bulb can be removed.
- c. Replace with a new bulb.
- d. When installing the taillight lens, do not overtighten the screws, as this may damage the lens.

## 3. Turn Signal Light Bulb Replacement Procedure

The bulb replacement is made in the same manner as for the tail/stop light bulb in paragraph 2 above.

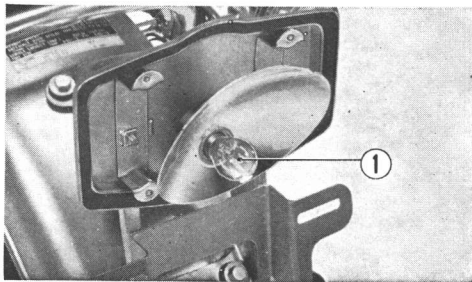

① Tail/stop light bulb