

## 1. Rear Brake Wear Indicator

When the rear brake is applied, a red arrow ⑥, adjacent to the rear brake arm ⑦, moves toward a red reference mark ⑤ on the rear brake panel ④. The distance between the arrow and the reference mark, on full application of the rear brake, indicates brake lining thickness.

If the arrow aligns with the reference mark on full application of the rear brake, the brake shoes should be removed and inspected for wear.


**NOTE:** When brake service is necessary, see your authorized Honda dealer, who has been properly trained to perform such service. Use only high quality genuine Honda Parts.

## ● Wheel Removal and Inspection

### 1. Front Wheel Removal

Removal of the front wheel is performed in the following manner.

- Raise the front wheel off the ground by placing a support under the engine.
- Remove the speedometer cable ① from the front wheel hub assembly.
- Remove the axle holder fixing nuts ② and the front wheel assembly can be removed from the front fork.

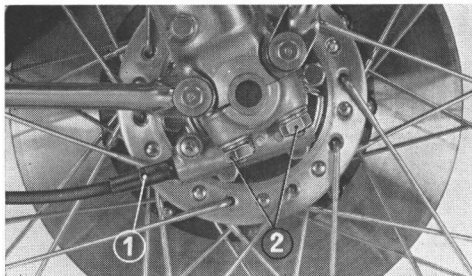

① Speedometer cable ② Axle holder fixing nut