


light will come on when the brake pedal is depressed to the point where the brake just starts to take hold. If the stop light switch is late in switching on the stop light, screw in ① the switch lock nut ② and if the stop light comes on too early, screw out ③ the switch lock nut ②.

**NOTE:** There are separate stop light switches for the front and rear brake system. The front stop light switch is attached to the brake hose joint installed on the steering stem bracket. The front stop light switch should be independently checked for proper operation. Malfunctions are corrected by replacement with a new switch.

## ● Replacing Light Bulbs

When exchanging the light bulbs, always replace the bulb with that of the specified type and rating. This is important to prevent the electrical lighting circuit from malfunctioning.

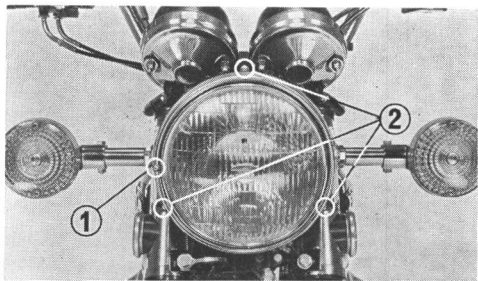

- ① Horizontal adjusting screw
- ② Holding screws