


ESSENTIAL INDIVIDUAL COMPONENTS

IGNITION SWITCH

The ignition switch (1) is below the instrument panel.

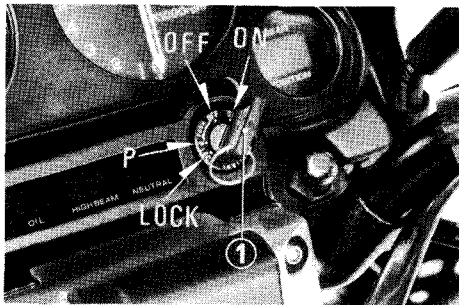

(1) Ignition switch

Key Position	Function	Key Removal
LOCK (Steering lock)	Steering is locked. Engine and lights cannot be operated.	Key can be removed.
P (Parking)	For parking the motorcycle near traffic. The taillight is on, but all other lights are off. The engine cannot be started.	Key can be removed.
OFF	Engine and lights cannot be operated.	Remove the key.
ON	Headlight, taillight and instrument lights are on and other lights can be operated. Engine can be started when the engine stop switch is at RUN.	Key can be removed.