

STARTING THE ENGINE

WARNING

- * *Never run the engine in a closed area. The exhaust contains poisonous carbon monoxide gas.*

NOTE:

- * Do not use the electric starter for more than 5 seconds at a time. Release the starter button for approximately 10 seconds before pressing it again.
- * The electric starter will work when the transmission is in gear with the clutch disengaged.

Preparation

Make sure the transmission is in neutral, the engine stop switch is at RUN and the fuel valve is ON. Insert the key and turn the ignition switch ON.


Check that the red oil pressure warning light comes ON.

Starting Procedure

To restart a warm engine, follow the procedure for "High Air Temperature."
Normal Air Temperature

10°–35°C (50°–95°F)

1. Pull the choke lever (1) back all the way to Fully open (B).
2. Start the engine, leaving the throttle closed.

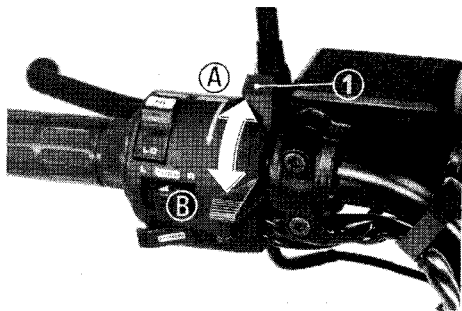

- (1) Choke lever (A) Fully closed
(B) Fully open