


IDLE SPEED

The idle speed adjustment procedure given here should only be used when changes in altitude affect normal idle speed as set by your dealer. See your authorized Honda dealer for regularly scheduled carburetor adjustments, including individual carburetor adjustment and synchronization.

NOTE:

- * Inspect and adjust carburetor idle speed after all other engine adjustments are within specifications.
 - * The engine must be warm for accurate idle speed adjustment. Ten minutes of stop-and-go riding is sufficient.
1. Warm up the engine, shift to neutral and place the motorcycle on its center stand.
 2. Adjust idle speed with the throttle stop screw (1).
Idle Speed: $1,000 \pm 100$ rpm
(In neutral)

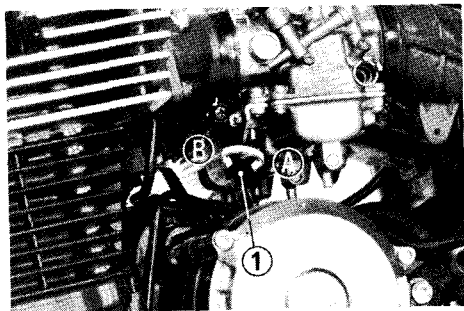

(1) Throttle stop screw

(A) Increase
(B) Decrease