


4. Remove the axle holding bolt (9).
5. Remove the axle nut (10) while holding the axle at the other end with a wrench.
6. Pull out the axle.
7. Move the wheel to the right to separate it from the final drive gear case.
8. Remove the rear wheel.

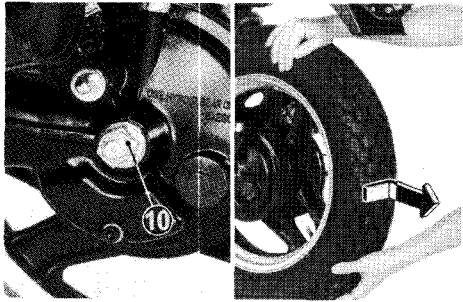

(10) Axle nut

Installation:

- Before installing the rear wheel, check that the wheel hub and final drive gear splines are coated with grease.
- Reverse the removal procedure.
- Be sure the splines on the wheel hub fit into the final gear case.
- Before tightening the axle holding bolt, tighten the axle nut to prevent misalignment.

