


## FUSE REPLACEMENT

The main fuse (1), located near the battery on the positive lead, is 30A.

The fuse box (4) is located between the handlebars. The specified fuses are 10A and 15A. Spare fuses (5) are located in fuse box. To remove the fuse cover (2), remove the screws (3) attaching the fuse cover (2) to the fuse box. Pull the fuse cover forward.

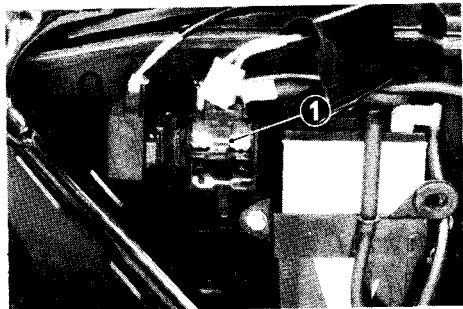


(1) Main fuse

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

### CAUTION:


\* *Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.*

To replace the main fuse (1), loosen the screws and remove the old fuse. Install the new fuse and tighten the screws securely.

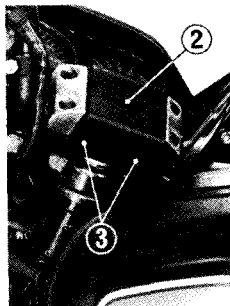

(2) Fuse cover

(3) Screws

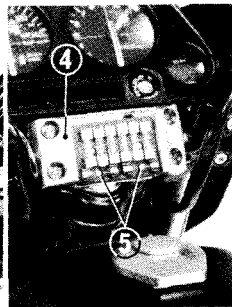

(4) Fuse box

(5) Spare fuse