


## AIR CLEANER

Refer to the Safety Precautions on page 69 .


The air cleaner should be serviced at regular intervals (page 71 ). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the left side cover (page 51 ).
2. Remove the attaching screws (1) and air cleaner housing cover (2).

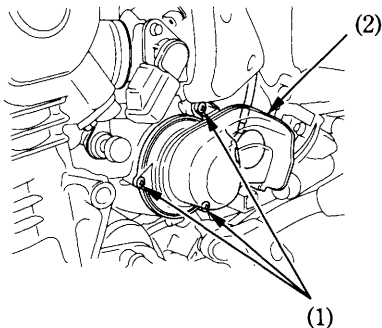

- (1) Attaching screws  
(2) Air cleaner housing cover

3. Pull out the air cleaner (3) and clean the air cleaner using compressed air from the inside, or replace it if necessary.
4. Install the air cleaner.
5. Install the removed parts in the reverse order of removal.

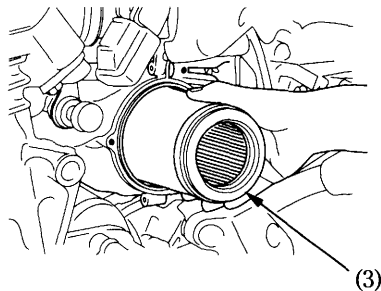

- (3) Air cleaner