

(Ref.No.) Description	Function
(7) Tachometer red zone	<p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p>NOTICE</p> <p>Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.</p>
(8) Coolant temperature gauge	Shows coolant temperature (page 17).
(9) Right turn signal indicator (green)	Flashes when the right turn signal operates.