

SIDE COVER

The right side cover must be removed for the battery maintenance. The left side cover must be removed for air cleaner maintenance.


The right and left side covers can be removed in the same manner.

Removal:

1. Remove the seat (page 54).
2. Remove the bolt (1).
3. Remove the prong (2) from the grommet (3).
4. Pull the tab (4) out from the fuel tank rib (5) and remove the side cover (6).

Installation:

1. Slide the tab into the fuel tank rib.
2. Align the side cover prong with the rubber grommet. Press the side cover into position.
3. Install the securing bolt and tighten it.

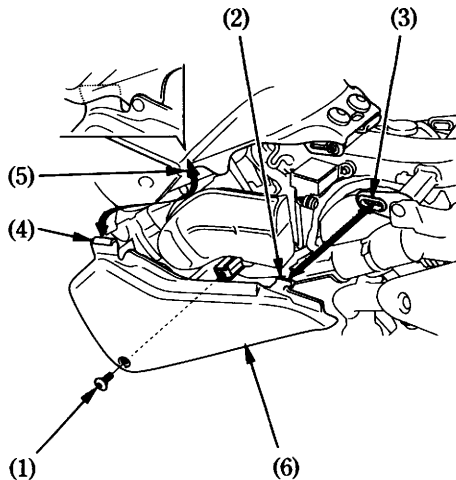

- | | |
|-------------|-------------------|
| (1) Bolt | (4) Tab |
| (2) Prong | (5) Fuel tank rib |
| (3) Grommet | (6) Side cover |