

The immobilizer system (HISS) indicator can continue to flash every 2 seconds during 24 hours when the ignition switch is OFF. Once the time has elapsed, the indicator lamp switches off automatically.


Indicator lamp flashing can be activated or deactivated.

To change the flashing setting, proceed as follows:

1. Set the ignition switch to ON and then back to OFF.  
Leave the key inserted.
2. Press and hold down buttons (2) and (3) for more than two seconds. The immobilizer (HISS) indicator (1) will start flashing.  
Remove the key.

When the ignition switch is turned ON, the indicator light function is deactivated.

If you removed the battery, after you have refitted it, turn the ON/OFF switch to ON. The HISS mode is automatically reactivated and the indicator light flashes.

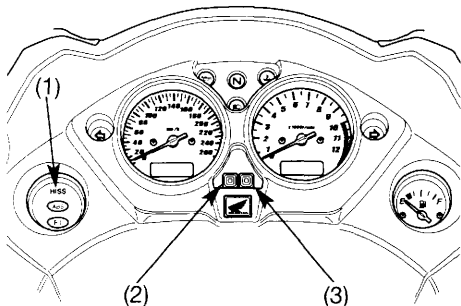

- (1) Immobilizer system (HISS) indicator  
(2)(3) Buttons