


Battery Removal:

The battery (1) is in the battery box behind the right side cover.

1. Make sure the ignition switch is OFF.
2. Remove the right side cover (page 53).
3. Remove the metal battery support bracket (2) by undoing the two bolts (3).
4. First disconnect the negative (-) terminal lead (4) from the battery, then disconnect the positive (+) terminal lead (5).
5. Pull out the battery from the battery box (6).

Installation:

1. Reinstall in the reverse order of removal.
Be sure to connect the positive (+) terminal first, then the negative (-) terminal.
2. Check all bolts and other fasteners are secure.

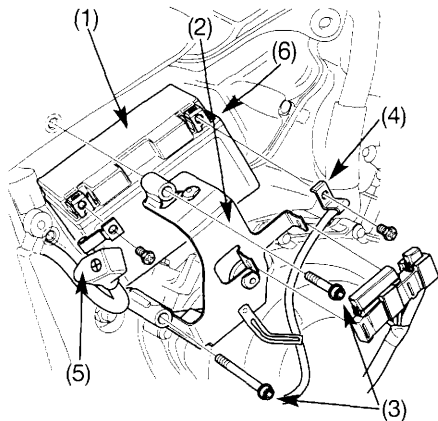

- (1) Battery
- (2) Metal battery support bracket
- (3) Bolts
- (4) Negative (-) terminal lead
- (5) Positive (+) terminal lead
- (6) Battery box