


Fuse box:

The fuse box (1) is located under the rear seat. The fuses specified are as follows:

10A - 20A

1. Remove the rear seat (page 50).
2. Open the fuse box protective cover (2).

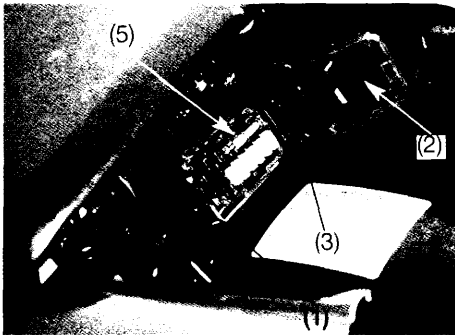

- (1) Fuse box
- (2) Fuse box protective cover
- (3) Fuse box cover
- (4) Fuse puller
- (5) Spare fuse

3. Open the cover of the fuse box (3).
4. Extract the fuse using the fuse puller (4) supplied in the toolkit. If the fuse is burnt out, fit a replacement.
The spare fuse (5) is located in the fuse box.
5. Close the fuse box covers, fuse box protective cover and refit the rear seat.

