


## Position Light Bulb

1. Remove the half fairing on the side on which the bulb is to be replaced (page 54)
2. Pull out the bulb socket (1).
3. Extract the bulb (2) without turning it.
4. Replace with a new bulb, following the removal procedure in reverse order.

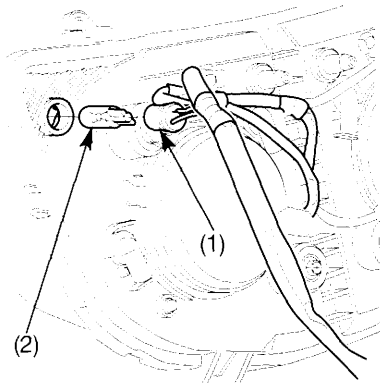

- (1) Socket  
(2) Position light bulb