


## Front Turn Signal Bulb

1. Remove bulb socket (1) as shown in the figure.
2. Remove bulb (2) by pressing it and turning it counterclockwise.
3. Fit a new bulb by performing the removal procedure in reverse, and check that the turn signal is working properly.
  - Use only the amber bulb.

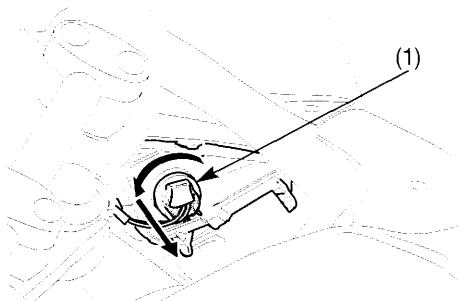

- (1) Bulb socket  
(2) Bulb

