



(Ref. No.) Description	Function
(3) Tachometer	Shows engine rpm. The tachometer needle will swing to the maximum scale on the dial once when the ignition switch is turned ON.
(4) Tachometer red zone	Never allow the tachometer needle to enter the red zone, even after the engine has been broken in. CAUTION: * Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.
(5) Right turn signal indicator (green)	Flashes when the right turn signal operates.
(6) Neutral indicator (green)	Lights when the transmission in neutral.

