




CLUTCH

Clutch adjustment may be required if the motorcycle stalls when shifting into gear or tends to creep; or if the clutch slips, causing acceleration to lag behind engine speed. Minor adjustments can be made with the clutch cable adjuster (4) at the lever (1).


Normal clutch lever free play is:

10–20 mm (0.4–0.8 in)

1. Pull back the rubber dust cover (2). Loosen the lock nut (3) and turn the clutch cable adjuster (4). Tighten the lock nut (3) and check the adjustment.
2. If the adjuster is threaded out near its limit or if the correct free play cannot be obtained, loosen the lock nut (3) and turn in the clutch cable adjuster (4) completely. Tighten the lock nut (3) and install the dust cover.

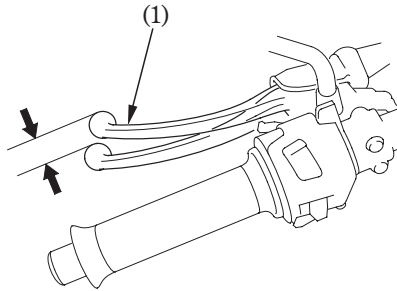

(1) Clutch lever

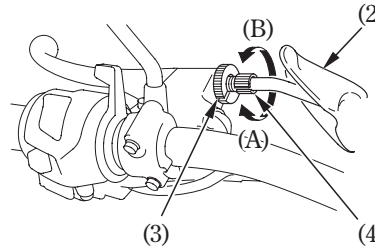

(2) Dust cover

(3) Lock nut

(4) Clutch cable adjuster

(A) Increase free play

(B) Decrease free play

