



High Air Temperature

35°C (95°F) or above

1. Do not use the choke.
2. With the throttle slightly open, press the starter button.

Low Air Temperature

10°C (50°F) or below

1. Follow steps 1 – 2 under “Normal Air Temperature.”
2. When engine speed begins to pick up, operate the choke lever to keep fast idle at:
2,300 – 3,400 min⁻¹ (rpm)
3. Continue warming up the engine until it runs smoothly and responds to the throttle when the choke lever (1) is at Fully OFF (B).

CAUTION:

*** Extended use of the choke may impair piston and cylinder wall lubrication and damage the engine.**

