
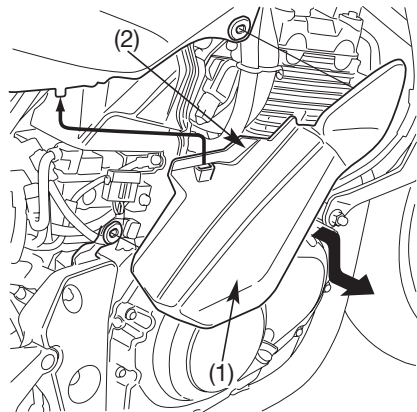


SIDE COVER

Side covers (1) must be removed in order to service the battery, the air cleaner element, and the rear shock absorber. To remove the left and right side covers:

1. Pull the fairing outwards.
2. Disengage tabs (2).

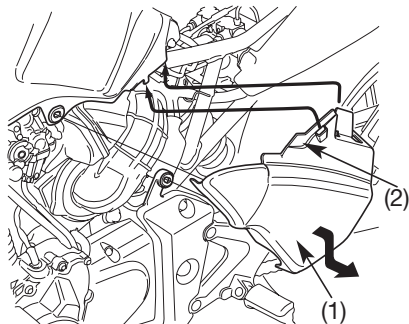

- (1) Side covers
(2) Tabs