

## WHEEL REMOVAL


(Refer to the maintenance precautions on page 54.)

### Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the right caliper assembly (1) from the fork leg by removing the fixing bolts (2).

### CAUTION:

- \* To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.

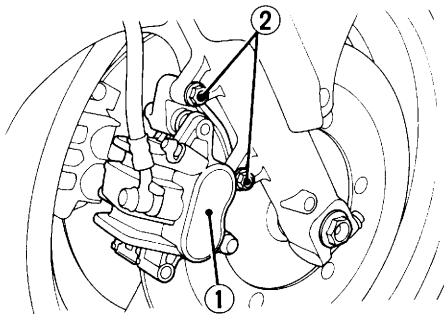

- (1) Brake caliper assembly  
(2) Fixing bolts