

| <b>(Ref.No.) Description</b>                        | <b>Function</b>  |
|---|--|
| (7) PGM-FI malfunction indicator lamp (MIL) (amber) | <p>Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON.</p> <p>If it comes on at any other time, reduce speed and take the motorcycle to your Honda dealer as soon as possible.</p> |
| (8) Tachometer red zone                             | <p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p><b>NOTICE</b></p> <p>Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.</p>   |
| (9) Tachometer red zone indicator (amber)           | <p>Flashes when the tachometer needle enters in the red zone or reaches your selected revolution (page 38). Should also light for a few seconds and then go off when the ignition switch is turned ON.</p>   |