


The immobilizer system has such a function that keeps the immobilizer system (HISS) indicator blinking at 2 second intervals for 24 hours. This blinking function can be turned on or off.

To turn the blinking function on or off:

1. Turn the ignition switch ON.
2. When the odometer is displayed (page 27 ), push and hold control button A (2) for more than 2 seconds.

The immobilizer system (HISS) indicator (1) comes on briefly and the blinking function is set to on or off.

3. Turn the ignition switch OFF and remove the key.

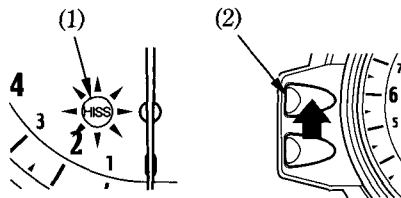

- (1) Immobilizer system (HISS) indicator
- (2) Control button A