

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								REFER TO PAGE
			× 1,000 km	1	6	12	18	24	30	36	
			× 1,000 mi	0.6	4	8	12	16	20	24	
		MONTH		6	12	18	24	30	36		
DRIVE CHAIN			EVERY 1,000 km (600 mi) I, L								112
DRIVE CHAIN SLIDER					I			I		I	118
BRAKE FLUID		NOTE (3)			I	I	R	I	I	R	47
BRAKE PADS WEAR					I	I	I	I	I	I	127
BRAKE SYSTEM					I			I		I	47
* BRAKELIGHT SWITCH						I		I		I	134
* HEADLIGHT AIM						I		I		I	82
CLUTCH SYSTEM					I	I	I	I	I	I	50
** EXHAUST GAS CONTROL ACTUATOR CABLE			EVERY 24,000 km (16,000 mi) I								—
SIDE STAND						I		I		I	120
* SUSPENSION						I		I		I	119
* NUTS, BOLTS, FASTENERS					I		I	I		I	—
** WHEELS/TYRES						I		I		I	—
** STEERING HEAD BEARINGS					I		I	I		I	—