

<b>(Ref.No.) Description</b>	<b>Function</b>
(3) Low fuel indicator (amber)	<p>Lights when there is only reserve fuel left in the fuel tank.</p> <p>The amount of fuel left in the tank when it lights with the vehicle set upright is approximately:  3.5 ℓ (0.92 US gal , 0.77 Imp gal)</p> <p>When this indicator comes on, the lower segment of the multi-function display switches to the reserve fuel consumption (page 23 ).</p> <p>Should also light for a few seconds and then go off when the ignition switch is turned ON.</p>
(4) Neutral indicator (green)	Lights when the transmission is in neutral.
(5) Tachometer	<p>Shows engine revolutions per minute.</p> <p>The tachometer needle will swing to the maximum scale on the dial once when the ignition switch is turned ON.</p>
(6) High beam indicator (blue)	Lights when the headlight is on high beam. Should also light for a few seconds and then go off when the ignition switch is turned ON.