


Digital Clock

Shows hour and minute. To adjust the time, proceed as follows:


1. Turn the ignition switch ON.
2. Press and hold control button B (2) for more than 2 seconds. The clock will be set in the adjust mode with the display blinking.

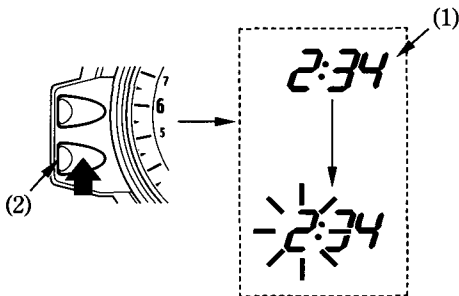

(1) Digital clock

(2) Control button B

3. To set the hour, press control button A (3) until the desired hour is displayed.
 - The time is advanced by one hour each time the button is pressed.
 - The time advances fast when the button is pressed and held.

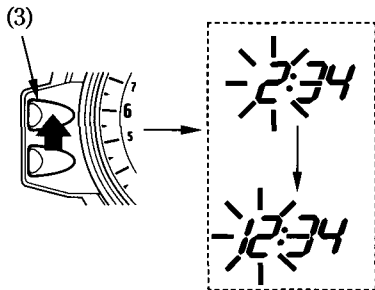

(3) Control button A