

<b>(Ref.No.) Description</b>	<b>Function</b>
(7) PGM-FI malfunction indicator lamp (MIL) (amber)	<p>Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON.</p> <p>If it comes on at any other time, reduce speed and take the motorcycle to your Honda dealer as soon as possible.</p>
(8) Tachometer red zone	<p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <div data-bbox="671 610 826 655" style="border: 1px solid black; padding: 2px; text-align: center;"><b>NOTICE</b></div> <p>Running the engine beyond recommended maximum engine speed (the beginning of the tachometer red zone) can damage the engine.</p>
(9) Tachometer red zone indicator (amber)	<p>Flashes when the tachometer needle enters the red zone or reaches your selected revolution (page 43). Should also light for a few seconds and then go off when the ignition switch is turned ON.</p>