

## WIND GUARD


The right and left wind guard can be removed in the same manner.

### Removal:

1. Remove the upper cowl cover (page 60 ).
2. Remove the clips A (1).
3. Remove the clips B (2).
4. Remove the wind guards (3).

### Installation:

- Installation can be done in the reverse order of removal.

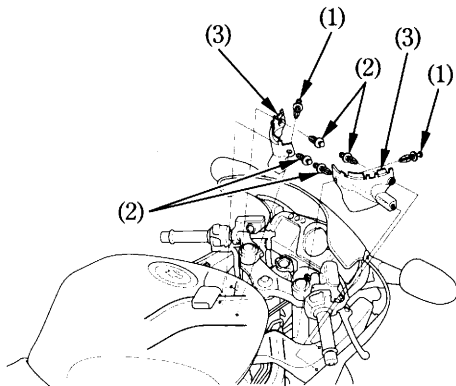

- (1) Clips A
- (2) Clips B
- (3) Wind guards