


## HEADLIGHT AIM VERTICAL ADJUSTMENT

Vertical adjustment can be made by turning the knob (1) in or out as necessary.

Remove the upper cowl cover (page 60 ) to adjust head-light aim.

Obey local laws and regulations.

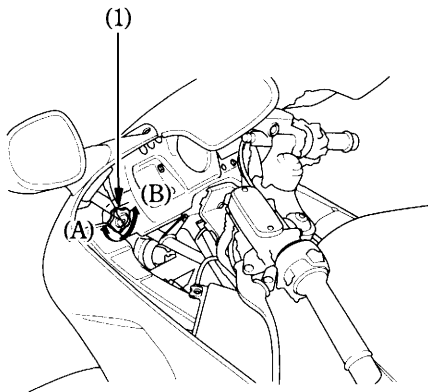

(1) Knob

(A) Up

(B) Down