

4. Check the rear axle alignment by confirming the scale (3) on the drive chain adjusters against the index marks (4) on the swingarm.

Both left and right scales should correspond. If the axle is misaligned, turn the left or right adjusting bolt until the scales correspond on both side of swingarm and recheck chain slack.

5. Tighten the axle nut to specified torque.

Axle nut torque:

**93 N·m (9.5 kgf·m , 69 lbf·ft)**

If a torque wrench is not used for this installation, see your Honda dealer as soon as possible to verify proper assembly.

6. Tighten the adjusting bolts lightly.