

### Main Fuse A:

The main fuse A (1) is located behind the rear cowl.

The specified fuse is:

**30A**

1. Remove the rear cowl (page 57 ).
2. Disconnect the wire connector (2) of the starter magnetic switch.
3. Pull out the old fuse and install a new fuse.  
The spare fuse (3) is located under the starter magnetic switch.
4. Reconnect the connector and install the rear cowl.


### FI Fuse:

The FI fuse (4) is located under the seat.

The specified fuse is:

**30A**

1. Remove the seat (page 54 ).
2. Open the FI fuse box cover (5).
3. Pull out the old fuse and install a new fuse.  
The spare fuse (3) is located under the starter magnetic switch.
4. Close the FI fuse box cover and install the seat.

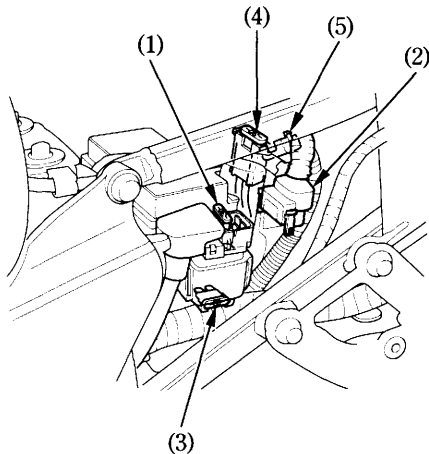

- (1) Main fuse A  
(2) Wire connector  
(3) Spare main fuse

- (4) FI fuse  
(5) FI fuse box cover