


## Position Light Bulb

< Except U, IIUtype >

1. Remove the position light cover (1).
2. Pull the position light reflector (2) and remove it.
3. Pull out the bulb (3) without turning.
4. Install a new bulb in the reverse order of removal.

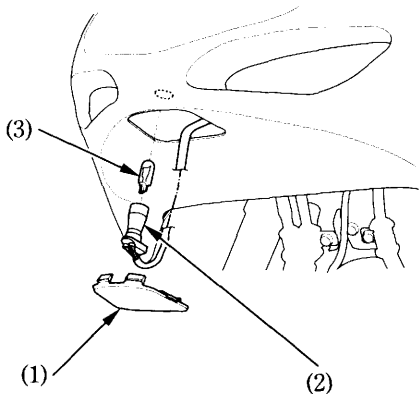

- (1) Position light cover
- (2) Position light reflector
- (3) Bulb