


## LOWER COWL


### Removal:

1. Remove the bolts A (1) and bolts B (2).
2. Remove the clip A (3).

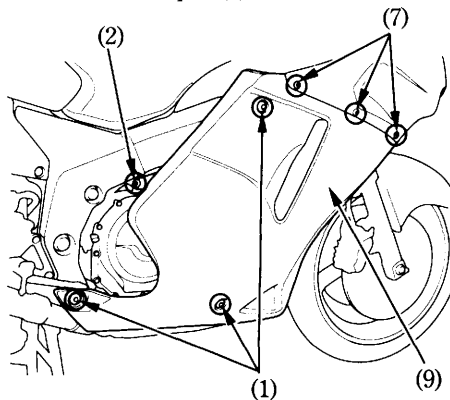

- (1) Bolts A
- (2) Bolts B
- (3) Clip A

- (7) Bolts D
- (9) Right lower cowl

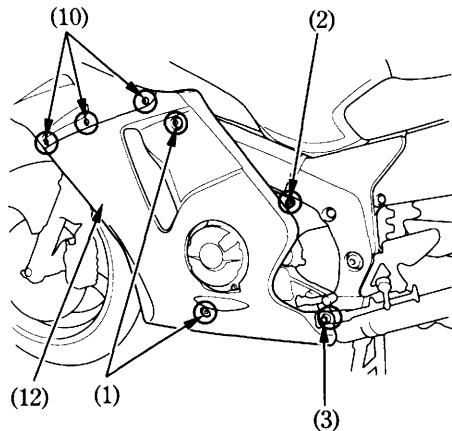

- (10) Bolts E
- (12) Left lower cowl