

(Ref. No.) Description	Function
(6) High beam indicator (blue)	Lights when the headlight is on high beam.
(7) Speedometer	Shows riding speed.
(8) Odometer	Shows accumulated mileage.
(9) Tripmeter	Shows mileage trip.
(10) Low oil pressure indicator (red)	<p>Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>CAUTION: * Running the engine with insufficient oil pressure may cause serious engine damage.</p>
(11) Neutral indicator (green)	Lights when the transmission is in neutral.
(12) Right turn signal indicator	Flashes when the right turn signal operates.
(13) Tachometer	Shows engine rpm.