


3. Remove the oil filter (3) with a filter wrench and let the remaining oil drain out.

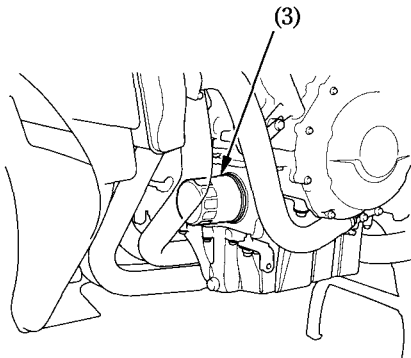


(3) Oil filter

4. Apply a thin coat of engine oil to the new oil filter rubber seal (4).

5. Using a special tool and a torque wrench, install the new oil filter and tighten to a torque of:

10 N·m (1.0 kgf·m , 7 lbf·ft)

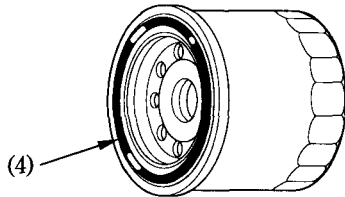

(4) Oil filter rubber seal